



## <u>Head</u> actuator plugged into the foot actuator spot on the control box/control connector:

If head does <u>NOT</u> adjust when pressing foot up/down buttons, **you will need a new head actuator - please contact customer service.** 

If head <u>DOES</u> adjust when pressing the foot up/down buttons, **you will need a new control box/control connector - please contact customer service.** 

## <u>Foot</u> actuator plugged into the head actuator spot on the control box/control connector:

If foot does <u>NOT</u> adjust when pressing head up/down buttons, **you will need a new foot actuator - please contact customer service.** 

If foot <u>DOES</u> adjust when pressing the head up/down buttons, **you will need a new control box/control connector - please contact customer service.** 

You will need a new control box/control connector and actuator. Please contact customer service.